



GLOBALBLOCK REBAR SADDLES PROVIDE A SIMPLE MEANS OF SUPPORTING REBAR, WITHOUT TIES, NEAR THE CENTER OF THE BEAM, WHILE ALSO PERMITTING THE BARS TO BE OFFSET STACKED TO CREATE A CHASE FOR VERTICAL STEEL. USE SADDLES WHEN FINISHING THE WALL WITH BUILDCRETE STUCCO OR PLASTER, OR WHERE MECHANICAL ATTACHMENT IS NOT REQUIRED FOR THE FINISH.

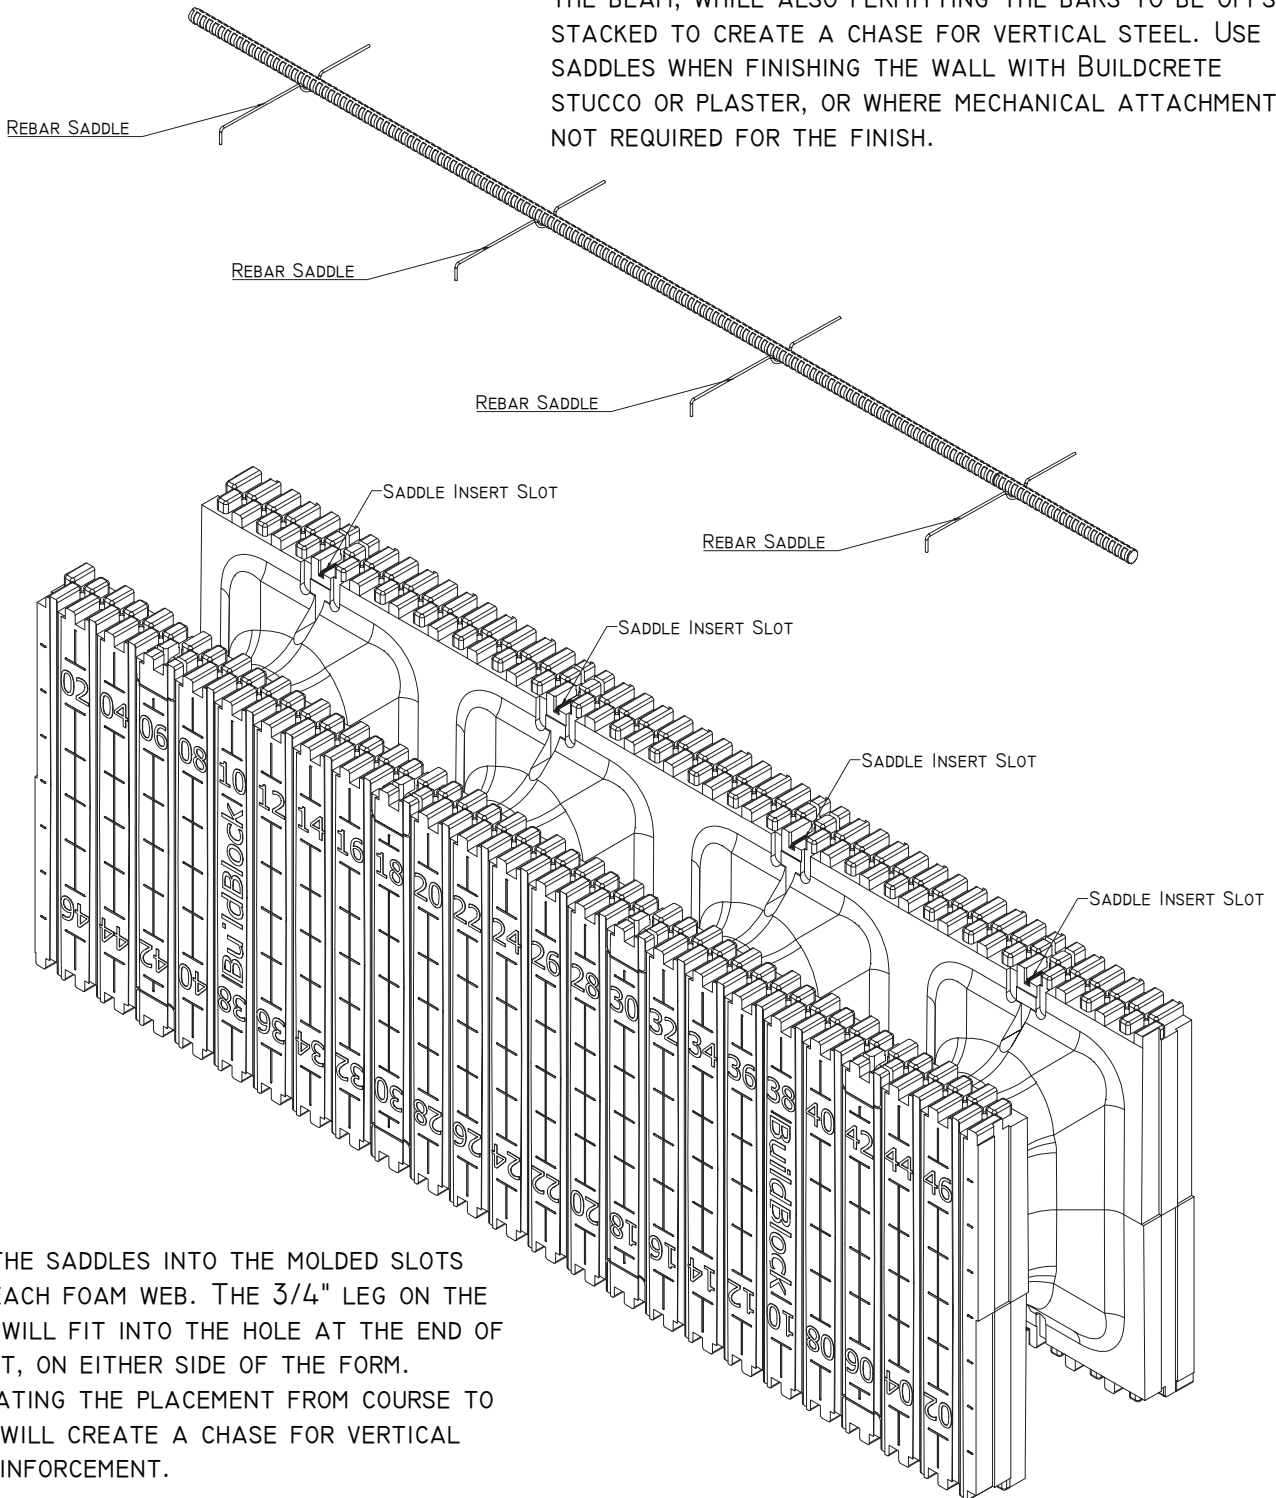

PLACE THE SADDLES INTO THE MOLDED SLOTS ABOVE EACH FOAM WEB. THE 3/4" LEG ON THE SADDLE WILL FIT INTO THE HOLE AT THE END OF THE SLOT, ON EITHER SIDE OF THE FORM. ALTERNATING THE PLACEMENT FROM COURSE TO COURSE WILL CREATE A CHASE FOR VERTICAL POST REINFORCEMENT.

REBAR PINS ARE REQUIRED FOR THE TOP COURSE TO ENSURE ADEQUATE CONCRETE COVER FOR TOP HORIZONTAL REINFORCEMENT. WIRE TIES ARE REQUIRED ON THIS COURSE TO MAINTAIN PLACEMENT OF HORIZONTAL AND VERTICAL REINFORCEMENT.

	GLOBALBLOCK USING REBAR SADDLES				
	DATE/REV	9/2015	SCALE	NTS	DETAIL SHEET
	NOTES				60N
9705 N. BROADWAY EXTENSION, SUITE 200, OKLAHOMA CITY, OK 73114 OFFICE: 405-840-3386 TOLL FREE: 866-222-2575 FAX: 831-597-0792 BUILDBLOCK.COM		CONSTRUCTION SHALL BE IN ACCORDANCE WITH ALL APPLICABLE LOCAL AND NATIONAL CODES. ALL DRAWINGS ARE SUBJECT TO CHANGE WITHOUT NOTICE.			